


## Stap 1. Monteer het accuslot

- 1.1 Bevestig het slot met de meegeleverde schroefjes boven op de dwarsbalk.
- 1.2 Druk de rubber dop in het accuslot.
- 1.3 Haak met een draaiende beweging de dwarsbalk in het accuslot en draai het op slot.

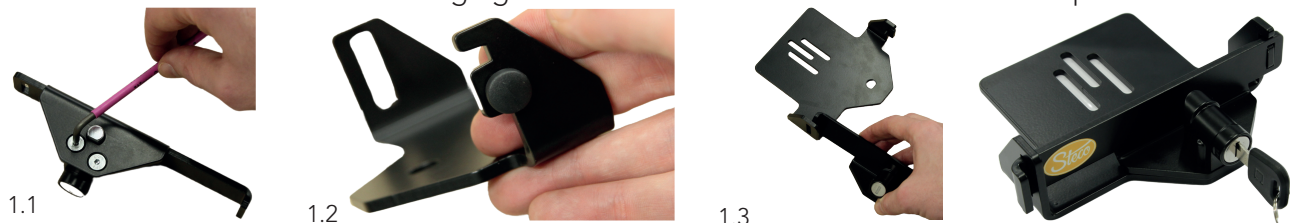

## Stap 2. Accuslede losmaken

Haal de accu uit de fiets. Draai met behulp van een inbus- en steeksleutel de moer van de schroef (BES3) of moer van de schroeven (BES2) los.



## Stap 3. Accuslot positioneren

Plaats het accuslot tussen de drager en de accuslede. Zet de schroeven op hun positie. Plaats de moeren op de schroeven zonder vast te draaien.

Plaats de accu op de juiste plek (kleine ruimte tussen de accu en het slot).

Plak de beschermstickers op de plek waar het accuslot contact maakt met de bagagedrager.



## Stap 4. Accuslot bevestigen

Na het plaatsen van de beschermstickers kunt u het accuslot bevestigen.

Let op! Bij BES2 fietsen moet u de slede licht naar voren duwen terwijl u de schroeven aandraait.

## Waarschuwing

*Ondanks deze extra beveiliging raden wij nog altijd aan uw accu zoveel mogelijk binnen te bewaren.*

*Voor optimale werking adviseren wij het accuslot te laten monteren door uw fietsenmaker.*


*Steco is niet verantwoordelijk voor schade aan de accu of fiets bij foutieve montage.*

## Step 1. Assemble the battery lock

1.1 Attach the lock to the top of the crossbar with the screws provided.

1.2 Press the rubber cap into the battery lock.

1.3 Place the crossbar onto the battery lock, using a twisting motion. Turn the key to lock.

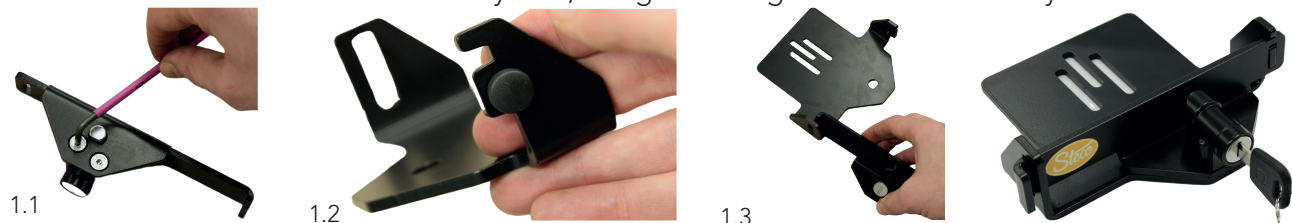

## Step 2. Detach the battery slide

Remove the battery from the bicycle. Loosen the nut on the screw (BES3) or nut on the screws (BES2), using an allen and socket wrench.



## Step 3. Positioning the battery lock

Place the battery lock between the carrier and the battery slide. Put the screws in their positions. Place the nuts on the screws without tightening them.

Place the battery in the correct position (small space between the battery and the lock).

Place the protective stickers where the battery lock touches the rack.



## Step 4. Attach battery lock

After placing the protective stickers, you can attach the battery lock.

Note! On BES2 bikes, you must push the carriage slightly forward while tightening the screws.

### Warning

*Despite this extra security, we still recommend keeping your battery indoors as much as possible.*

*For optimal performance, we recommend having the battery lock mounted by your bike shop.*

*Steco is not responsible for damage to the battery or bicycle in case of incorrect mounting.*